

### Sheathing Wall Construction with gypsum, plywood or OSB sheathing.

Spot all over-driven, or improperly installed fasteners with **FastFlash** or **Joint & Seam Filler**.

Apply a thick bead of **FastFlash** or **Joint & Seam Filler** to all sheathing joints.


Use a dry joint knife or trowel to spread 1 inch beyond the seam on each side to a thickness of 20-30 mils.

Follow sheathing manufacturer recommendations to repair joints or

gaps greater than 1 inch.

Apply the selected R-Guard air and water-resistive barrier over the prepared sheathing wall.


Step One

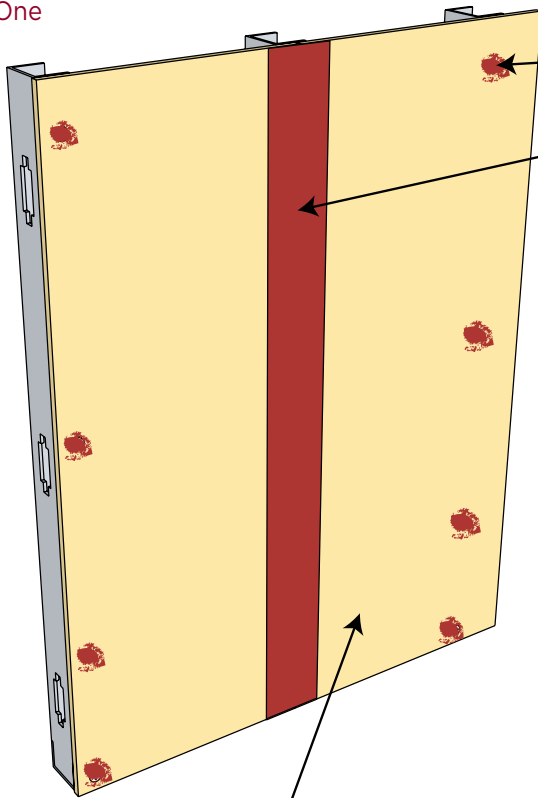

FastFlash or  
Joint & Seam Filler on  
fasteners & seams

Sheathing Wall

Step Two

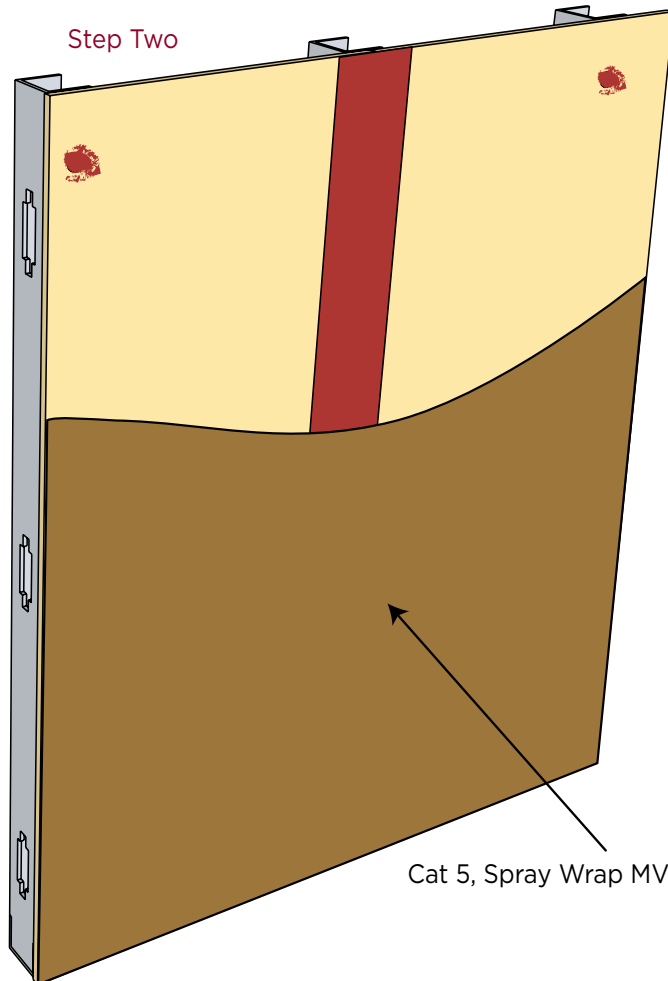

Cat 5, Spray Wrap MVP or VB